

## 1. 자재 사양

① 사이즈 150 x 220 mm

② 인쇄도수 표지- 1도 인쇄  
내지- 1도 인쇄

③ 지류 M 메트지 100g

④ 페이지 12페이지(표지포함)

⑤ 제본 중철

⑥ 후가공 없음


## 3. 제작 및 수정일자

1. 2021. 08. 23\_V.01

## 4. 수정사항

## 2. 기재 언어

영문

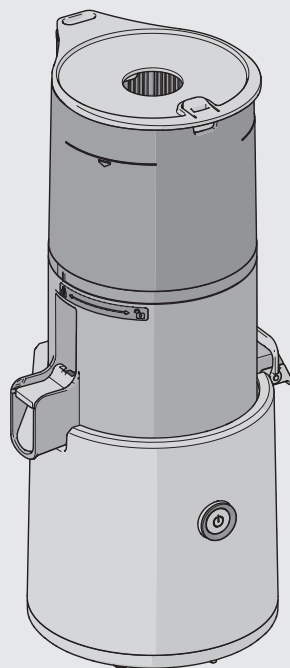

**HUROM™**

## CONTENTS

- p.02 1. Precautions for Safe Use
- p.03 2. Precautions During Use
- p.04 3. Power Switch Guide /  
4. Precautions Before Juicing
- p.06 5. How to Assemble
- p.07 6. Assembly and Disassembly of Silicone
- p.08 7. How to Use
- p.09 8. When Multi-screw Stops During Use
- p.10 9. How to Disassemble and Clean
- p.11 10. Before Requesting Repair

## Before Reading Manual

1. Read 'Precautions for Safe Use' (p. 2-3) and use the appliance properly.
2. After reading the manual, keep it in a convenient location for future reference.
3. Do not use it abroad which has different power supply and voltage.
4. Any quality improvements is subject to change without notice.



### 1. Precautions for Safe Use

- 01 You should read <Safety Precautions>
- 02 You should follow <Safety Precautions>
- 03 Precautions are classified as follows.



**Warning** A violation of any of the warning marks may cause a serious injury or death.

- **Do not insert or pull the power cord with wet hands.**
- **Use the right voltage only as specified on the warranty card and the product specifications. Failure to follow this instruction may result in electric shock, fire, or performance impairment.** Connecting to a different voltage may shorten the motor's lifespan or cause malfunction.
- **Securely insert the power cord plug all the way into an outlet.**
- **Do not bend, tie, damage or pull the power cord by force, or place it near a high temperature or heat such as a gas stove. Also, do not place any heavy object on top of the product, wedge it into a narrow space, or alter it.**

• **Do not remodel it under any circumstances.** Also, do not attempt to dismantle or repair it yourself.

• **Do not insert any foreign objects such as a finger or iron pin into any crack or hole in the product body.** It may cause a fire, electric shock, injury and/or malfunction. For after-sales service and maintenance of a product, contact the HUROM Customer Service Center.

• **When the power plug is damaged, do not repair or remodel it yourself and, instead, visit an after-sales service center or branch store.**

• **Do not get wet or splash water on the product body.** Make sure that no water or foreign material goes into the product's power switch.

• **Do not control the power switch with wet hands.**

• **For safety, ground the power outlet at all times.**

Also, do not ground it to a gas pipe, plastic water pipe, or telephone line. Make sure to use a grounded outlet.

• **Do not attempt to dismantle any parts of the chamber set or insert foreign objects such as a finger or spoon into the inlet or juice outlet during operation.**

• **Do not use it within children's reach. Children should be carefully supervised so that they do not play with this device.** There is a risk of an injury or malfunction if children accidentally hit and knock it down.

• **A person who is not familiar with handling the product should not use it him/herself.** Anyone with physical or mental problems or who lacks experience and knowledge should not use it without a supervisor present.

• **Do not use the product while wearing or holding any items with magnetic force (e.g. magnetic bracelets).** Placing magnetic objects near the product may cause malfunction.



**Caution** A violation of any of the caution marks may lead to a serious injury or death.

• **Do not operate the product unless the product body set and chamber set are securely connected.**

• **If there is a gas leak, etc., do not touch the power cord but, instead, open the windows and thoroughly ventilate the area.**

• **If the Multi-screw stops during operation, the product automatically rotates in reverse and then starts normal operation again.** If the power is unstable and a reverse rotation does not work while the Multi-screw's rotation is stopped during operation, press the power switch for over 1 second to activate a reverse rotation and then press the power switch again briefly to start a normal operation.

• **Do not move the product body, or disassemble or assemble the chamber set or parts during operation.** Make sure to stop the operation and pull out the power cord beforehand.

- **When using the product, be careful so that a tie, long necklace, scarf, etc. doesn't get into the inlet.**
- **Place this product on an even and stable surface for use.**
- **When inserting ingredients into the inlet, do not use a chopstick, spoon, any hard object or anything other than the pusher.**
- **Do not use the product for more than 30 minutes continuously each time.** It may overheat the motor to cause malfunction. To operate it again, completely stop the device for about 5 minutes before use.
- **Do not exert any excessive shock to or drop the product.**
- **If the device produces any unusual sounds, excessive heat or smoke, stop using it immediately and contact the Customer Service Center.** The smell experienced when using a new product will naturally go away over time.
- **Pull the power cord plug from the outlet when it is not in use.** Also, when pulling the power cord, make sure to grab the plug to pull it.
- **Do not clean the product at a temperature of 80°C or higher.** Do not place it in a dishwasher, dryer, microwave, etc. It may cause malfunction and/or deformation of parts.
- **The product weighs approximately 6.2 kg. When moving the product, make sure to securely hold the product body with both hands.** If you move it by holding just the chamber or the sides of the product body, the body may fall to cause a bodily injury or malfunction.
- **Do not use this household-use product for commercial purposes.** Excessive extraction of a large amount of ingredients may cause damage to the parts. In case it is to be used for commercial purposes, please contact the Customer Service Center on the method of use.



## 2. Precautions During Use

- **Make sure to thoroughly understand how to prepare ingredients and prepare them properly before inserting them.**

-Poorly prepared ingredients may hinder the extraction process and/or cause damage to the product.

- **Ingredients in need of extra care**

-When using soft ingredients alone such as bananas, ripened kiwi and tomatoes, the juice may stagnate inside the chamber, which can make juicing difficult. Please add other ingredients that are not too soft.

-When inserting walnuts, peanuts, almonds, sunflower seeds, pine nuts, beans, etc., add only a small amount or add them with other ingredients after soaking them in water.

- **Ingredients unable to be juiced**

- Do not insert ingredients that cannot be juiced such as sesame seeds, coffee beans, Chinese peppers, tree barks and pine needles. Do not insert mudfish, eels, shrimp, marsh snails, squids, etc.

- Do not insert fruits soaked in alcohol, honey or sugar (grapes, raspberries, mulberries, etc.) and enzymes (glasswort, rock pine enzymes, etc.).

- Do not insert ingredients whose attributes make them difficult to be juiced such as silverberries, aloe, cactus, quince, yams, kudzu root, sugar cane, acorn and dandelions.

- Do not insert boiled ingredients such as boiled potatoes and sweet potatoes.

- Do not insert ice made by freezing water.

- **It is recommended that you consume extracted vegetable juice immediately, if possible, and do not refrigerate it for a long period of time.**

- **Do not use this product for pulverizing grains. It may cause damage or malfunction.**

- **Do not re-extract juice from pulp that has already been juiced.**

- **Do not conduct any idle run of the product before inserting any ingredients.**

- **Do not insert ingredients into the hopper above the guided limit mark.**

- **Do not use it for more than 30 minutes continuously.**

- It may overheat the motor to cause malfunction.

However, when using it continuously, pause the operation and use it after a break of over 5 minutes.

- **Do not insert a chopstick or spoon into the juice/pulp outlet during operation.**

- **When inserting ingredients, do not use anything other than the pusher.** It may damage the parts or cause a bodily injury and/or malfunction.

- **Do not operate the power switch with wet hands.**

- It may cause electric shock, short circuit and/or fire. Do not get foreign substances on or near the power switch.

- **Use it with the juice cap open.**


- The juice can flow backwards into the hopper if the juice cap is closed while juicing.

- **Do not use it when the top of the product body is wet from extracted juice or water.**

### Note

1. Withered ingredients, which have been stored for a long time in the refrigerator, or frozen fruits may produce only a small amount of juice or none at all.
2. If the product is not cleaned immediately after use, the pulp may dry up, which makes it difficult to disassemble and clean it and also cause performance impairment. So, if possible, clean it immediately after use.

Before operating the product, press the power switch.

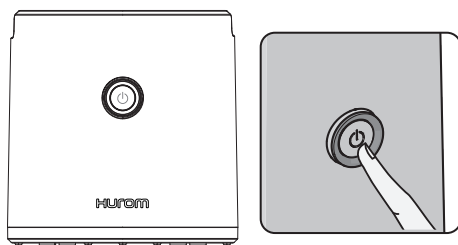

#### Operate / WHITE LED blinks

- It works when the power switch is briefly pressed in the Standby Mode.
- It is used when activating the product for juicing.
- During operation, the white lamp blinks.
- If the hopper cover is opened during operation, the product stops and the white lamp is lit. If the hopper cover is closed again within 60 seconds, the operation continues. But, if 60 seconds elapse, the operation automatically stops and it switches to the Standby (stop) state.

#### Stop / WHITE LED on

- This is used to stop the product's operation.
- The product stops when the power switch is briefly pressed in the operation state.
- When stopped, the white lamp is lit.
- ※ If the hopper cover is open or the chamber set is not assembled, the white lamp is turned off.
- ※ When 1 minute has elapsed from the Standby (stop) state, the product enters the power saving mode (light turned off). If the power switch is pressed or the chamber set is assembled, the power saving mode is deactivated and it switches to the Standby (stop) state.


#### Reverse rotation / ORANGE LED blinks

- This is used when the operation pauses or a reverse rotation is needed due to excessive insertion of ingredients during extraction.
- During a reverse rotation, the orange lamp blinks.
- ※ It works only when the power switch is pressed for over 1 second, and it stops when the switch is released.
- ※ If the Multi-screw stops during operation, the product automatically rotates in reverse but, if the power is unstable, the reverse rotation may not work. In such a case, press the power switch for over 1 second to activate a reverse rotation and then press the power switch again briefly to activate.

## 4. Precautions Before Juicing

- ※ If you have an allergy, make sure to select proper ingredients for your body when preparing the ingredients.
- ※ For the method of and notes on using the device for each ingredient, please refer to the recipe book.
- ※ Prepare ingredients in sizes able to be inserted into the hopper. If you want to juice a large volume or perform fast juicing, cut the ingredients into smaller pieces before inserting them. For about 1 kg, repeat the "disassemble and clean after juicing" step for use.
- ※ Do not insert ingredients into the hopper above the guided limit mark.
- ※ When juicing soft fruits, the juice of the ingredients may stagnate inside the chamber.
- ※ When juicing fibrous fruits and vegetables, the juice may thicken.
- ※ Inserting the following ingredients, which are impossible to be juiced, may lead to damage or malfunction.
  - Ingredients that cannot be juiced such as sesame seeds, coffee beans, Chinese peppers, tree barks and pine needles, as well as mudfish, eels, shrimp, marsh snails, squids, etc.
  - Fruits soaked in alcohol, honey or sugar (grapes, raspberries, mulberries, etc.) and enzymes (glasswort, rock pine enzymes, etc.)
  - Ingredients whose attributes make them difficult to be juiced such as silverberries, aloe, cactus, quince, bananas, yams, kudzu root, sugar cane, acorns and dandelions
  - Boiled ingredients such as boiled potatoes and sweet potatoes
  - Ice made by freezing water
- ※ Do not use it for pulverizing grains.
- ※ Refer to the instructions in <Precautions During Operation> (refer to p. 3).

## 4-1. Multi-screw

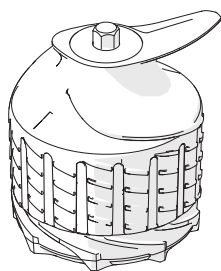

- As certain ingredients need extra care during preparation, please refer to the following instructions on how to prepare the ingredients.
- When juicing several times or in bulk, make sure to cut ingredients into small pieces, and then repeat the "disassemble and clean after juicing" step.
- For faster juicing, mince the ingredients into fine pieces.

### Citrus fruits

#### Grapefruit, oranges, lemons, etc.

Prepare the ingredients by peeling and cutting them into smaller pieces to fit in the hopper inlet. Remove all hard, unchewable seeds before insertion.

### Fruits with thick peel

#### Pineapples, dragon fruit, melons, watermelons, pomegranate, etc.

Prepare the ingredients by peeling and cutting them into smaller pieces to fit in the hopper inlet. Remove all hard, unchewable seeds before insertion.

### Seeded fruits

#### Grapes, apples, peaches, persimmons, plums, cherries, pears, Korean melons, etc.

For ingredients containing hard, unchewable seeds or large-sized seeds such as those in peaches, make sure to remove the seeds first and cut and prepare only the flesh. Hard seeds may stop the operation or damage the parts. Apple seeds contain toxicity so remove them as much as possible. For grapes, pluck each grape from the bunch after cleaning them thoroughly. Do not extract only the ingredients that are too soft; instead, mix them with other fruits and vegetables.

### Soft fruits

#### Single extraction (berries, cherry tomatoes, pineapples, etc.)

※ Thoroughly clean and cut the ingredients into small pieces that can fit in the hopper inlet. For fruits and vegetables with stalks, remove the stalks first.

#### Mixed extraction (strawberries, kiwi, bananas, tomatoes, mangoes, etc.)

※ For dry and viscous ingredients, mix them with other ingredients for extraction. Remove the peel and stalks, and also remove seeds, if there are any.

### Root vegetables

#### Carrots, beets, ginger, sweet potatoes, potatoes, garlic, etc.

Wash the ingredients in running water to remove dirt and other foreign substances. For fibrous ingredients such as ginger, peel the outer skin and cut them into small pieces. For long ingredients, cut them vertically for extraction.

### Leaf and stem vegetables

#### Celery, kale, cabbage, water parsley, wheatgrass, chives, etc.

Cut the ingredients into 3-cm or shorter pieces for extraction. Since leaf and stem vegetables are rough and fibrous, they are not easily juiced and can get caught in the Multi-screw.

- When juicing ingredients other than root, leafy and stem vegetables, the juice may stagnate.

### Frozen fruits

#### Fruits with thick peels, such as watermelons and melons

Peel the outer skin and cut the ingredients into smaller pieces to fit in the hopper inlet before freezing them.









#### Seeded fruits, such as mangoes, peaches and grapes

Use only frozen, seedless fruits. For fruits that have hard, unchewable seeds, such as mangoes, peaches and lemons, make sure to remove the seeds and then freeze them before use. For grapes, freeze the seedless kind for use.

#### Soft fruits and vegetables, such as bananas, strawberries, kiwi and tomatoes)

Peel bananas, kiwi, etc. completely and cut them into pieces that are 3 to 4cm-long that can fit in the inlet before freezing them. For cherry tomatoes, strawberries, etc., remove the stalks and then freeze them.

- It is used to make slushes, smoothies, ice cream, etc. that use frozen fruits.
- Cut the fruits into 2-cm pieces and freeze them before use.
- Never use it for crushing or grinding ice or other ingredients.
- Adding a large amount or large chunks at once may jam the product so please add the ingredients in small portions.

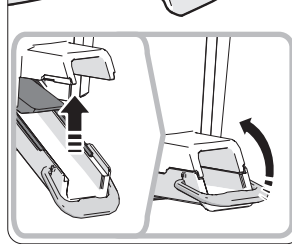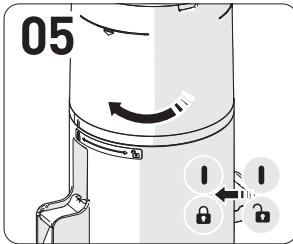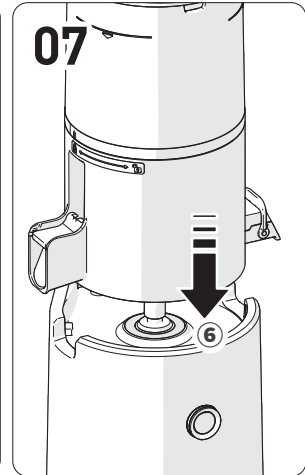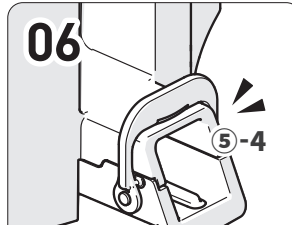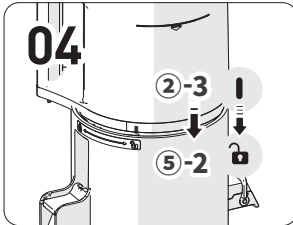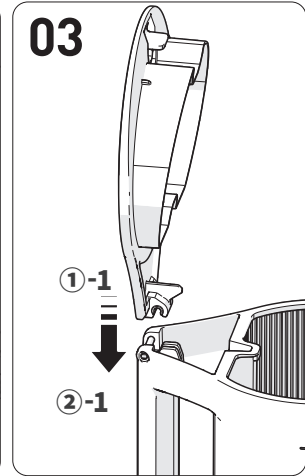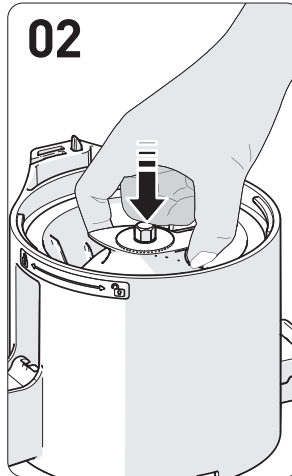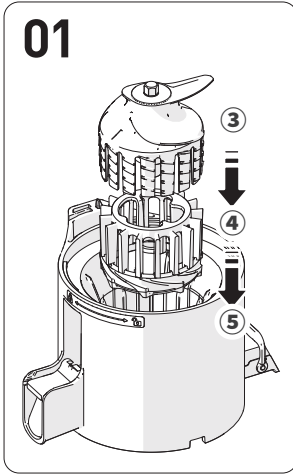

**01** Insert the Bottom part of multi-screw (5) into the chamber (4), and insert the Top part of multi-screw (3) as shown in the figure.

**02** Firmly press down the Multi-screw set and assembled in the chamber.

**03** Assemble the hopper cover (1-1) vertically onto the hopper (2-1).

**04** Align the hopper [ ] assembly guide mark (2-3) with the chamber [ ] assembly guide mark (5-2) to assemble them.

**05** Turn the assembled hopper clockwise up to the chamber [ ] assembly guide mark. If the internal parts are not assembled correctly, the hopper will not close.

**06** Check if the discharge cover and the loop (5-4) of the chamber are properly closed.

1. Lift the discharge cover to close it and fasten it with the loop.
2. If the packing is not correctly assembled or the lever is not properly closed, juice may leak or the lever may open during extraction.


**07** Place the correctly assembled chamber set onto the product body (6).

Assemble the chamber set first and then install it on the product body.


※ Silicone packings are consumables that are recommended to be replaced once every 6 to 12 months. They are available for purchase through the Customer Service Center.

(The juicer may leak if the product is not assembled properly.)

### Extraction Packing

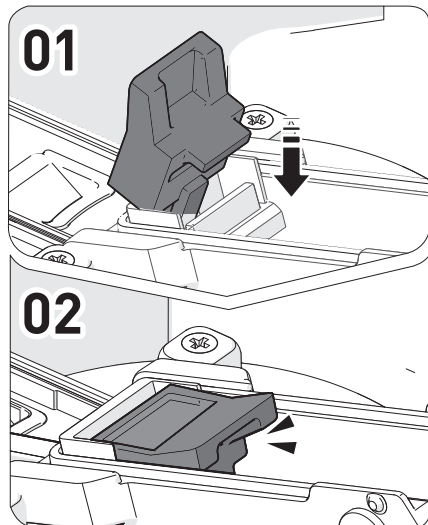


### Seal Packing

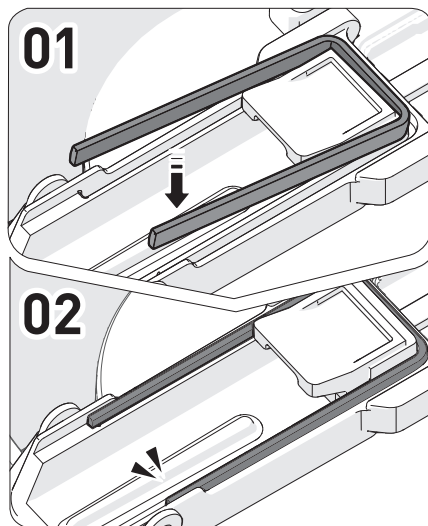


- 01** Hold and take out the packing as if you are pulling it back.
- 02** After cleaning, insert one side of the packing first as if you are hooking it.
- 03** Insert the remaining part and press down the perimeter.

### Juice Cap Packing

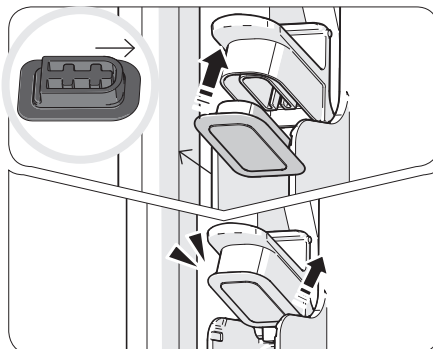


After cleaning, insert in a way that the round side of the packing faces outward while the grid grooves face upward.

### Hopper Packing

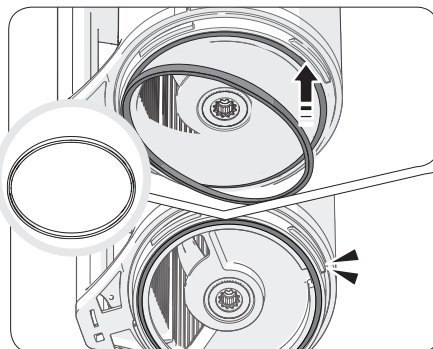










Assemble the packing as shown in the figure.

### Chamber Packing

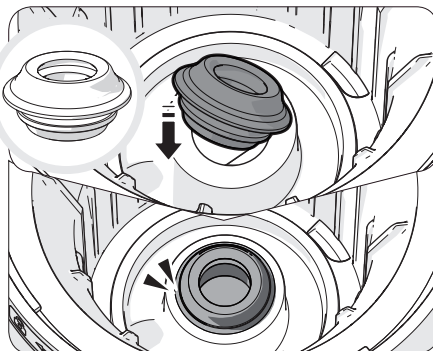

- 01** Grab one side and pull it back to detach it.
- 02** After cleaning, check the top and bottom of the packing and insert it as if you are hooking one side.
- 03** Firmly press the remaining part of the packing without any folded area.



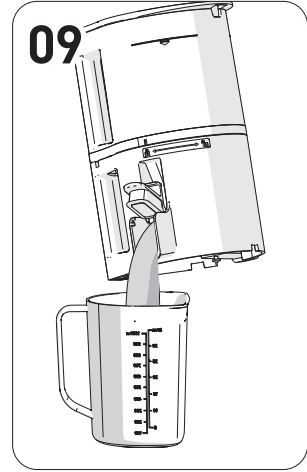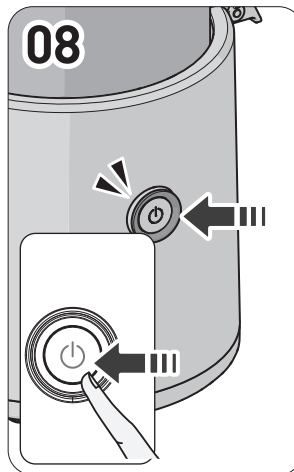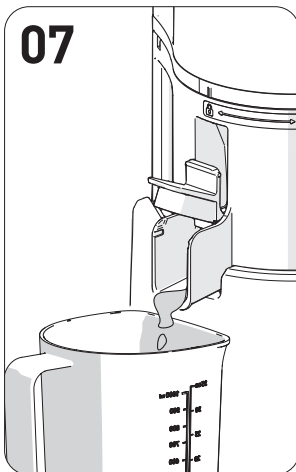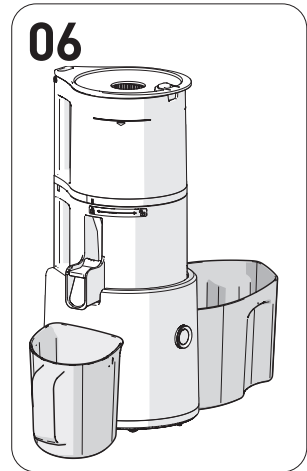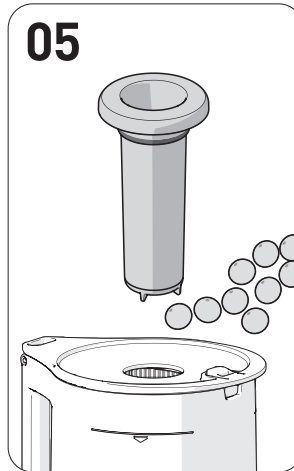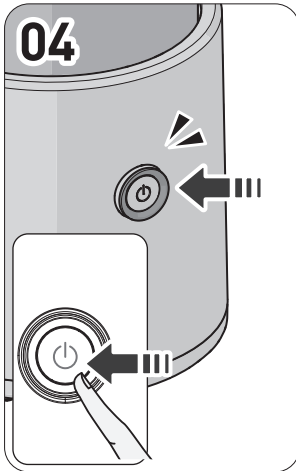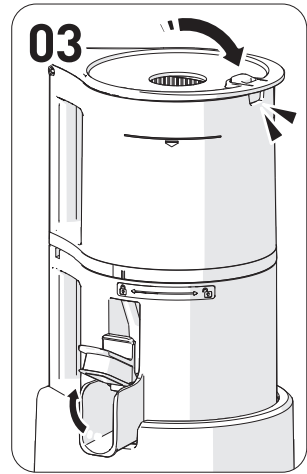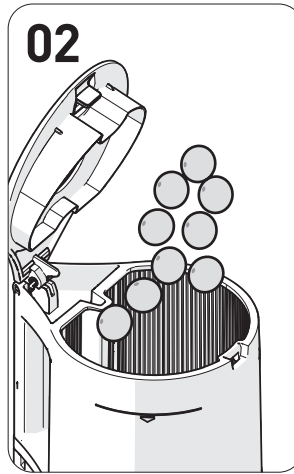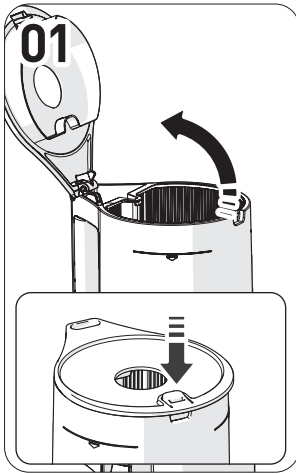

### 01 Open the hopper cover.

① Press the lever of the hopper cover to open it. Insertion of an excessive amount of ingredients may damage the product.

### 02 Add ingredients only up to the limit mark of the hopper.

① For soft ingredients, mixing them with other ingredients for extraction.

### 03 Close the hopper cover and keep the juice cap open.

- ① Before pressing the power switch, place the juice container and pulp container first.
- ② The juice may flow backwards into the hopper if the juice cap is closed during extraction. If the juice does not come out even after opening the juice cap, open the hopper cover and empty out the contents.
- ③ When the hopper cover is closed, the white lamp is lit.

### 04 Press the power switch briefly to start operation.

- ① The "click" sound during the operation of the product is the sound of the chamber set and the motor being locked together.
- ② During operation, the white lamp blinks on the power switch part.
- ③ If the Multi-screw stops during operation, the product automatically rotates in reverse but, if the power is unstable, the reverse rotation may not work. In such a case, press the power switch for over 1 second to activate the reverse rotation and then press the power switch again briefly to activate.
- ④ A timer, which automatically stops after about 5 minutes from the start of operation, is set. If the power switch is controlled during operation or the hopper cover is opened and then closed, which pauses and then restarts the machine, the timer is reset to 5 minutes again.

### 05 To add more ingredients during operation, use the additional inlet or open the hopper cover.

- ① When the hopper cover is opened, the operation stops.
- ② Do not use anything other than the designated pusher.
- ③ In case the Multi-screw spins but the ingredients fail to be ground in the hopper during extraction, use the pusher to press the ingredients down.

### 06 Empty out the pulp container and juice container so that they are not filled up.

### 07 Let the machine operate for about 1 more minute after all ingredients go down in the hopper.

- ① It slowly presses and squeezes the ingredients so it takes some time until the last ingredient is juiced.
- ② Removing the remaining pulp by additionally operating the machine after extraction makes it more convenient to detach the hopper and clean the parts.


### 08 Once the juicing and pulp removal are finished, press the power switch to stop the machine.

① The machine stops 3 seconds after it is stopped by the power switch.


### 09 Pour any remaining juice by tilting the chamber forward.

① For thickly concentrated juice made of tomatoes, etc., the juice may still remain in the chamber.

01

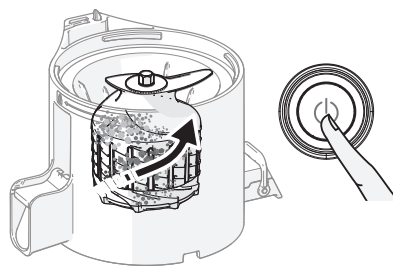

02

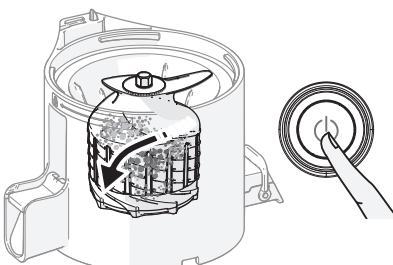


**01** If the Multi-screw stops during operation, the product automatically rotates in reverse and then goes into a normal operation. But, if the power is unstable, the reverse rotation may not work. In such a case, press the power switch for over 1 second to activate a reverse rotation. The reverse rotation is a function that returns the ingredients upward. It only works while the power switch is pressed and, once you lift your finger from the switch, the Multi-screw stops rotating.

**02** After the Multi-screw is completely stopped after a reverse rotation, press the power switch briefly to start the operation again. When operating the extraction or reverse rotation function, make sure to press the power switch after the Multi-screw has completely stopped moving.

#### Note

If the machine does not work even after following the above steps, pull the power cord plug from the outlet, detach the chamber set, wash it and use it again. Due to its characteristics, the motor will not stop at once but, instead, continue to spin slowly in the direction of operation before coming to a complete stop.

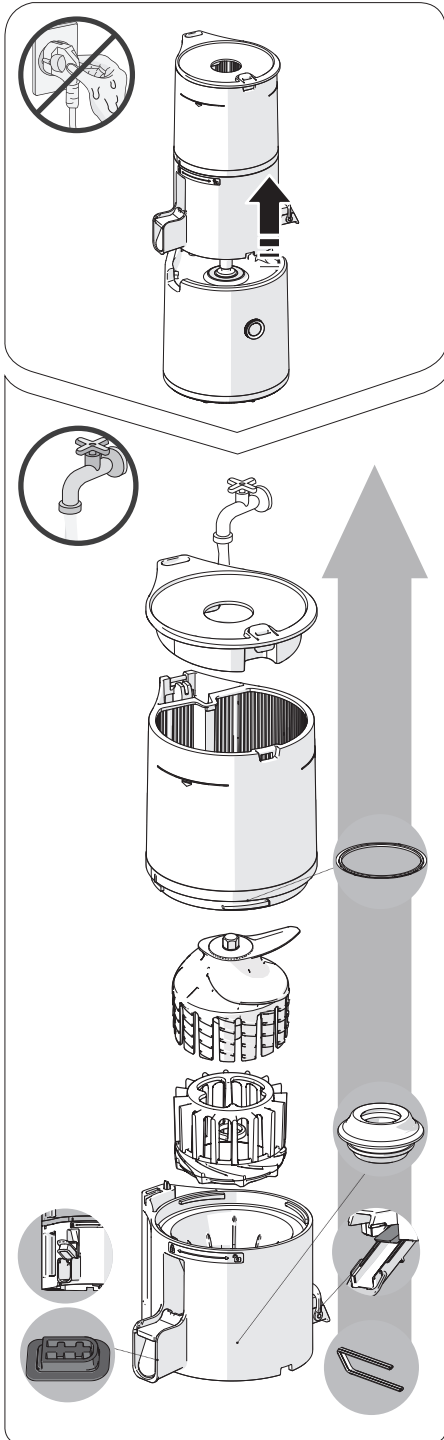

※ After the product stops operating completely, pull the power cord plug with dry hands. Even after the product is stopped, the motor will slowly come to a stop so wait about 3 seconds before detaching the chamber set.

**01** Detach the chamber set from the product body. Turn the hopper to open it and then sequentially pull each of the parts to disassemble them.

**02** Wash the parts with a cleaning brush under running water.

**03** Open the discharge cover and juice cap to clean the chamber.

**04** Wipe the product body with a damp towel or soft cloth.

**05** Detach and wash silicone packings after use.

- Residue may still be stuck.  
(hopper packing, juice cap packing, extraction packing, seal packing, chamber packing)

**06** You can sterilize the parts by soaking them in warm water diluted with baking soda, citric acid or vinegar.

※ Failure to clean the product immediately after use may cause its stainless steel parts and other parts to corrode or become discolored due to salt and pulp from the ingredients. Also, contaminants may be dried up and stuck inside, which makes it difficult to disassemble and clean them and may also cause performance impairment. Be sure to clean and air-dry it completely immediately after use and store it in a clean place. For long-term storage, use a cleaning brush to wash it. Do not clean with boiling or high-temperature water or use a cleansing sponge, steel sponge, abrasives and other sharp cleaning tools. Do not place it in a dishwasher or dish dryer.

## 10. Before requesting Repair

Check the following before asking for repair. For follow-up service and any inquiry you may have while using the product, please contact our Customer Center, or homepage at <http://www.globalhurom.com> Check the manufacturer's number or the number under the barcode when requesting for follow-up service or parts.

01. When it starts operating, a "click" sound is heard.	It is the sound of the motor being assembled with the Multi-screw. This is not a malfunction.
02. It does not operate only with the product body.	Check if the chamber set and product body are properly assembled. Make sure to turn the power off when assembling or disassembling the product.
03. Assemble it so that it is aligned with the safety sensor.	Check if it is assembled in accordance with the guide mark. Make sure to turn the power off when assembling or disassembling the product.
04. It does not work.	Check if the power cord is properly inserted. The machine may not work after a long period of [30 minutes or longer]. It will operate normally after the heat of the product body (motor) cools down.
05. It stops during a normal operation.	<p>Check if the hopper is properly assembled. If the hopper is assembled incorrectly, the product will not work. It will operate only when the lock symbol on the chamber and the hopper's assembly guide mark are assembled in a way that they face each other. Check if the product is assembled according to the steps specified in the assembly guide. Refer to the assembly guide page (page 6). <b>Haven't an excessive amount of ingredients or extremely thick ingredients inserted?</b> Refer to Page 9 of the manual to activate a reverse rotation.</p> <p>For safety, a timer, which automatically stops after about 5 minutes from the start of operation, is set. Press the switch again briefly to start operation.</p>
06. There are crack marks caused by a Multi-screw or scratch marks at the top of the Multi-screw.	In the process of making the molding, curve-shaped marks are created on the sides and top of the Multi-screw in addition to the straight-lined mold marks. They are normal parts and do not affect the operation at all.
07. Juice leaks through the pulp outlet immediately after the ingredients are inserted.	<p>Depending on the inserted ingredients, small amounts of juice may leak through the pulp outlet.</p> <p>This is not a product defect but, rather, a phenomenon caused by the characteristics of the ingredients. The leakage will stop once the product starts running. If the leakage continues, contact the Customer Service Center.</p>
08. Juice flows back into the hopper.	Did you extract juice with the juice cap closed? When juicing with the juice cap closed, the juice may flow backward into the hopper. If the contents are not sufficiently discharged even after opening the juice cap again, open the hopper cover and empty out the contents.
09. Juice leaks between the hopper and the chamber, or between the chamber and the product body.	Is the hopper packing or chamber packing assembled correctly? The juice will leak if the hopper packing or chamber packing has been assembled upside-down or incompletely. Check if the packing is assembled properly.
10. The hopper does not open.	<p>There may be excessive pulp remaining inside. Operate the produce to discharge the pulp inside or repeat the process of activating a reverse rotation for about 10 seconds and then stopping 2 to 3 times. Then, the hopper will open without any issue.</p> <p>Weren't any foreign substances or solid matters (hard seeds such as persimmon seeds) inserted? If any foreign substances or solid matters are inserted, parts may be damaged more seriously when attempting a reverse rotation so contact the Customer Service Center and request for after-sales service.</p>
11. The chamber shakes (during juicing).	The product may wobble slightly due to the motions of the product body's motor. Depending on the ingredients' characteristics (hard or tough), motions are generated in various magnitudes. This is not a malfunction but, rather, a normal phenomenon observed when the Multi-screw rotates. Compared to soft ingredients with much water content, relatively harder ingredients may seem to produce a greater shaking (e.g., carrots, potatoes, radishes, beet, kohlrabi, etc.)
12. The discharge cover is closed but the pulp is discharged.	Even if the lever is closed, pulp will be discharged naturally. Depending on the ingredients used, there may be a difference in the amount and speed of discharge.
13. An unusual noise is heard while juicing.	It is a natural sound produced when ingredients are being crushed. If the ingredients are hard or tough like apples, carrots, cabbage, celery, beets, etc., the extraction noise may be louder than that heard when juicing softer ingredients.
14. The Multi-screw stopped during operation but a reverse rotation does not work automatically.	If the power is unstable, the product may not perform a reverse rotation automatically. Refer to Page 9 of the manual and activate a reverse rotation.
15. During straining, it automatically ends before the 5-minute timer ends.	It is a function that automatically shuts down to protect the product in case the automatic reverse rotation is operated often during straining. This may occur if it is impossible to strain or if uncut ingredients are added. Please refer to Page 5 of the manual for the instructions on each ingredient and insert the ingredients accordingly.

**HUROM™**

**MADE IN KOREA | [www.globalhurom.com](http://www.globalhurom.com)**

Copyright© All Rights Reserved by HUROM

4DC010870\_V.01